

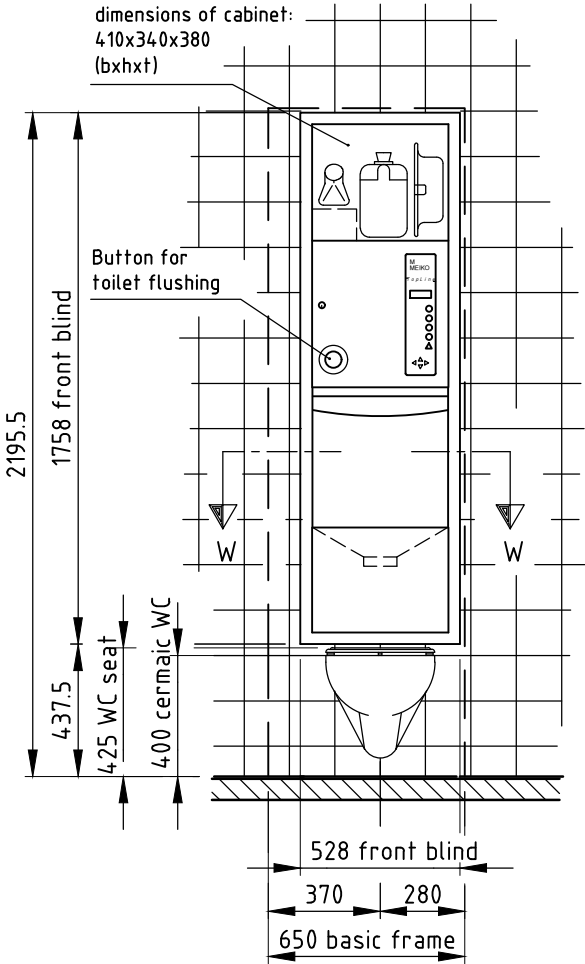
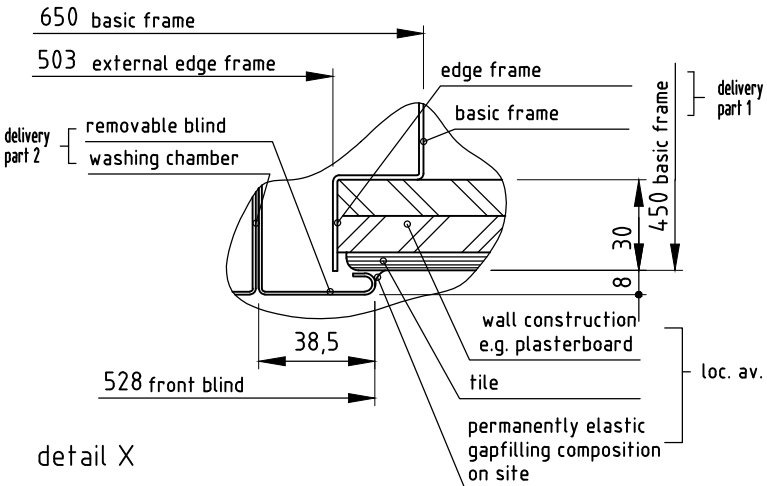



delivery part 1

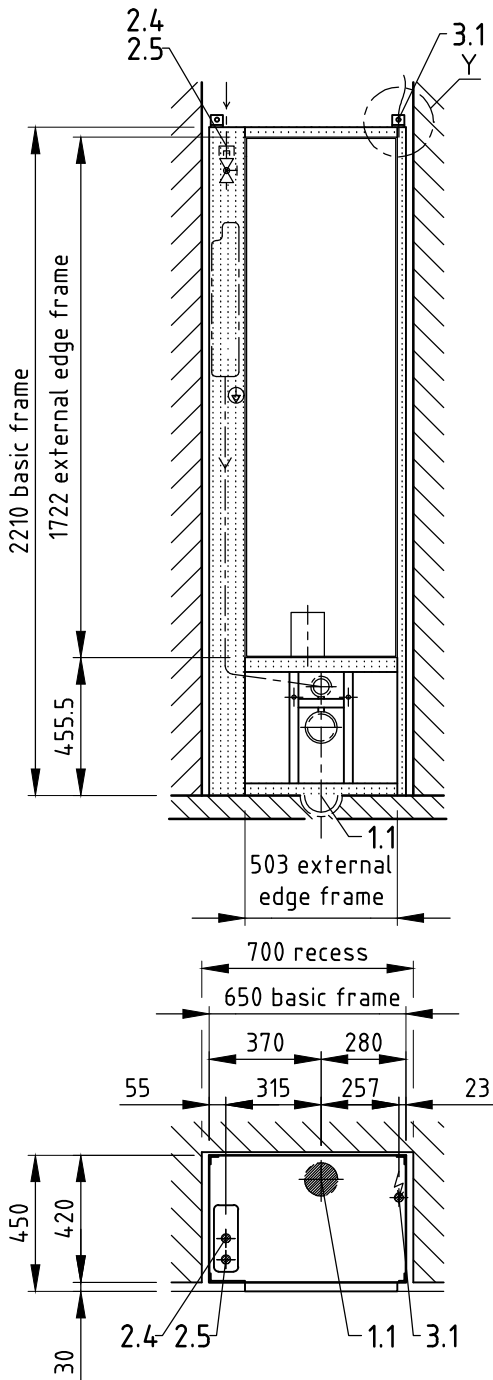


section W-W

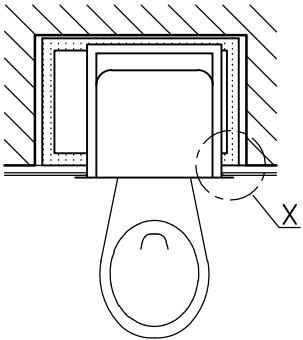


delivery part 2

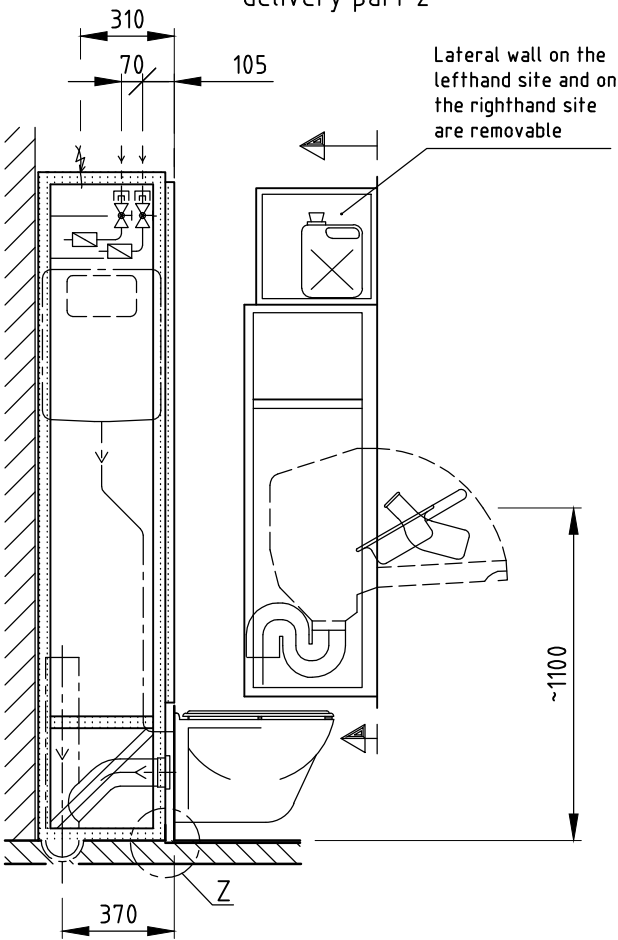

detail Y

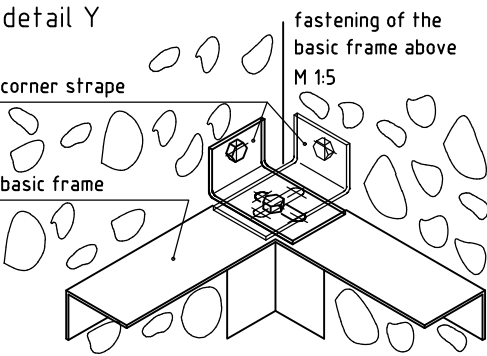

detail Z

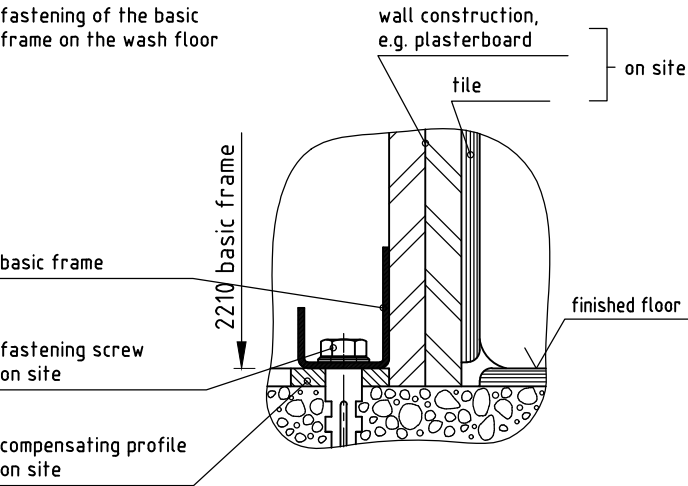

Installation of the basic frame on the screed provided on site. Height between the thop of the screed and the top of the WC (without seat) 400mm ± 10mm (valid for all wall-mounted WC´s according to DIN EN 38 with a screw distance of 180mm)
If the appliance ist to be installed on the unscreeded floor, or in case of a diffrent distance between the top of the screed and the top of the WC, an additional compensating frame can be supplied (siehe Detail Z).

Machines designated for installation in a cover niche Take care of the protective measures for the installation in rooms with bathtub or shower

sanitary installation		MEIKO	in the building
1.1	drain piping TopLine-WC	drain piping PE ø 110mm	floor sleeve DN 100 toilet drain connection DN 90
2.4	hot water	R 1/2" stop valves, dirt collector	inlet pipe DN 15, 45-60°C flow: 18l/min. flow pressure: 100-500 kPa
2.5	cold water	R 1/2" stop valves, dirt collector	inlet pipe DN 15, 5-25°C. flow: 18l/min., flow pressure: 100-500 kPa

electrical installation		Locally: 3 x 16A protection. Cable from OK basic frame about 2m. Protective measures and connection of the equipotential bonding must be carried out according to IEC 364-5-54 and conform to the local and national regulations. If the appliance is hard wired, a multiple-pole main switch must be installed. The main switch must be compliant with IEC 60947-1 and IEC 60947-3. Install the main switch in the vicinity of the appliance and in an area that is easily accessible. It must be clear that the main switch is linked to the appliance.	
3.1	3N PE - 400V, 50Hz, 4,6kW ⊕ equipotential bonding (thread bolt M8) protection class IPX5 connection box		

Original					
----------	--	--	--	--	--

MASCHINENBAU GMBH & CO.KG. ENGLERSTR.3 77652 OFFENBURG GERMANY TEL. 0781/2030 E-MAIL: info@meiko.de		It is neither allowed to give this drawing without our permission to a third party for information or reproduction, nor may it be used for competition purposes. We reserve all rights ! Attachment "Important information" to be considered !			
---	--	---	--	--	--

Reference: - -	Type: TOPLINE30/WC DT-ND/V THERMAL DISINFECTION DECENTRALIZED
----------------------	---

Drawing-No.: P00004787	Project-No.: - TL30 EN	Order-No.:	Order-No.:
----------------------------------	----------------------------------	------------	------------

Scale: 1:25	drawn: 01.09.17 rgd	checked: rgd	Customer checked:
----------------	------------------------	-----------------	-------------------